



SLAGGHACKA HRV-95B

1	H-95-01	Mutter	15	H-95-15	Trycke
2	H-95-02	Kolvstång	16	H-90-16	Stödring
3	H-95-03	Spännbackar	17	S-100-17	Kula
4	H-90-04	Styrning	18	H-90-18	Cylinder
5	H-90-05	Hölje	19	S-100-19	Stoppring
6	H-90-06	Stöd	22	S-100-22	Kolvring
8	S-100-08	Fjäder	25	S-100-25	O-ring (3)
9	S-100-09	Fjäder	27	S-100-27	Spännstift
12	S-100-12	Kolv	40	H-95-40	Ventil B
13	S-100-13	Kolvring	41	H-95-41	Ventilfjäder B
14	H-90-14	Begränsare	42	H-95-42	Hus B